

1	R.H. front side marker lamp	33	Reverse lamp	63	Line fuse for radiator cooling fan thermostat
2	Induction heater	34	Combined windscreen washer and wiper switch	64	Radiator cooling fan thermostat
3	Reverse lamp switch	35	Instrument voltage stabilizer	65	Buzzer door switch
4	Stop lamp switch	36	Inertia switch	66	Hazard warning flasher unit
5	Brake pressure failure switch	37	Service interval warning lamp*	67	Driver's seat belt buckle switch
6	R.H. rear side-marker lamp	38	Interior courtesy lamp door switch	68	Overdrive manual control switch*
7	R.H. front flasher lamp	39	Number-plate illumination lamp	69	L.H. parking lamp
8	Horn-push	40	Windscreen wiper motor	70	L.H. front flasher lamp
9	Horn	41	Fuse unit	71	Starter solenoid
10	Diode for brake warning circuit	42	Direction indicator warning lamp	72	Radiator cooling fan motor
11	Diode for service interval warning lamp*	43	Ignition warning lamp	73	Headlamp main beam warning lamp
12	Service interval counter*	44	Hand brake warning lamp	74	Tachometer
13	R.H. rear flasher lamp	45	Ignition starter switch	75	Hazard warning lamp
14	R.H. tail lamp	46	Switch illumination lamp	76	Line fuse for hazard warning
15	Stop lamp	47	Hazard warning switch	77	Hand brake switch
16	R.H. parking lamp	48	Overdrive gear/T.C.S.A. switch*	78	Overdrive solenoid
17	Headlamp main beam	49	Interior lamp	79	Luggage compartment lamp switch
18	Headlamp dip beam	50	Distributor	80	L.H. front side-marker lamp
19	Direction indicator switch	51	Ignition switch relay	81	Battery
20	Headlamp dip switch	52	Clock	82	Starter motor
21	Headlamp flasher switch	53	Panel illumination lamps	83	Starter solenoid relay
22	Windscreen washer pump	54	Coolant temperature gauge	84	Heater motor
23	Flasher unit	55	Seat belt warning lamp	85	Heater motor switch
24	Light switch	56	Transmission control spark advance micro-switch	86	Fuel gauge
25	Coolant temperature transmitter	57	Transmission control spark advance solenoid valve	87	Oil pressure gauge
26	Heater control illumination lamp	58	Luggage compartment lamp	88	Panel lamp switch
27	Running-on control valve oil pressure switch	59	Alternator	89	Line fuse for radio
28	Line fuse for running-on control valve	60	Ignition coil	90	Radio
29	Running-on control valve	61	Resistor for distributor	91	Cigar lighter illumination bulb
30	Time delay buzzer	62	Resistive cable	92	Cigar lighter
31	Fuel gauge tank unit			93	L.H. rear flasher lamp
32	Fuel pump			94	L.H. tail lamp
				95	L.H. rear side-marker lamp